

Fitting wheelie bin lid lock.

1 Find centre of wheelie bin and push indicator against wheelie bin lip.



2 Gentle close lid in top of indicator arm. Lower plastic arm down on to the bin lid Keep it level and mark at the end of plastic strip with a felt tip pen. Drill your 19mm hole with hole cutter.

Double checks: Push a tape measure/rule against lip, close lid take a size. If it is say 10mm add on 43mm and check so any bin will be X plus 43mm (see other diagram below)



Insert lock through hole. Put on washer and nut and tighten with shifting spanner or similar. Put on hooked arm and tighten

Inner catch. The barrel locks are 30mm long so this catch will be just about flush or over bin edge. Starting point would be to position slot on inner catch level with top edge and secure with one screw, Once you have found position secure with 4 screws in the top 4 holes




If you have any problems call me William on 07730894834 I am more than happy to help. We cannot be responsible for wrong measuring or drilling. www.binpin.co.uk

Tip: apply Blue Tack inside bin roughly where inner catch will be. Turn lock till cam arm marks Blue Tack. Tip

2 Secure inner catch down into bin as far as possible to get lid locked tightly. You can push lock back or forward to get an even better locking action, lock the bin and lid will settle down in position.

Tip 3 use the lock hook arm to feel where the inner catch is.

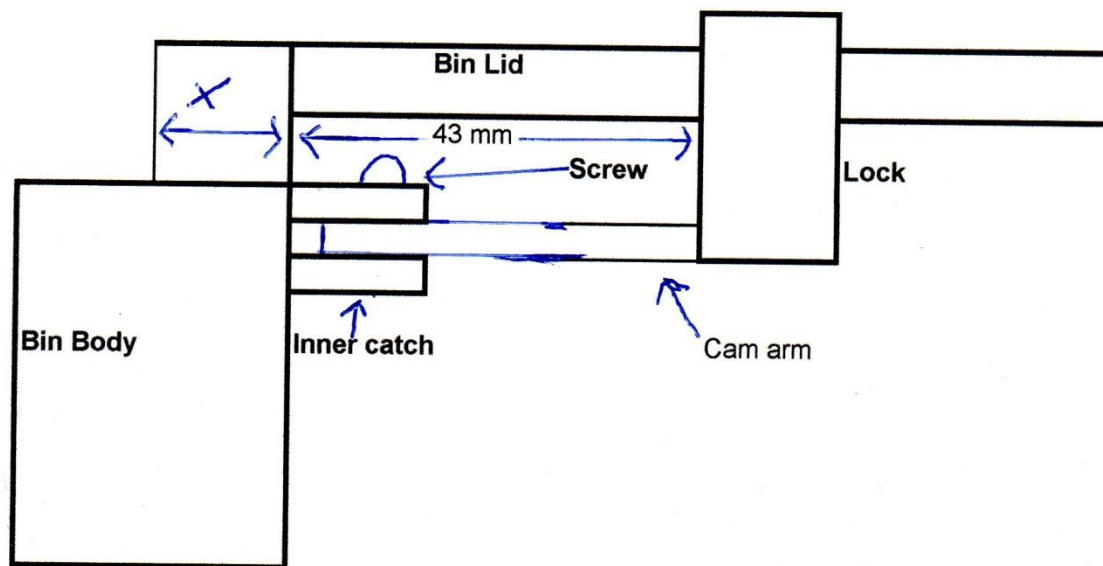

X plus 43 is the centre line of lock